

















Navigation Cheat Sheet

Motors@Work's revamped user interface uses an icon-based navigation bar and moves some of your motor-management tools. Use this cheat sheet to help you recognize new icons and navigate our new layout. For additional assistance navigating the new interface, check out our expanded help facilities, accessible via Resources.

ICON	DEFINITION	ICON	DEFINITION
	Menu Click to expand the navigation bar into a menu		Add Click to add new assets and measurements
	Overview Click to view your asset, reliability (coming soon!), & energy dashboards		Remove Click to remove asset and measurement records
	Inventory Click to list your motor and pump assets		Edit Click to edit your asset records
	Optimize Click to access pump optimization, motor evaluation, & our other motor-analysis tools		Update Click to update or save information
	Measurements Click to quickly add motor and pump measurements		Success / Good Indicates success as well as good asset performance
	Settings Click to edit company settings, to update personal preferences, & to use our upload utilities		Information Provides information on assets and tips for getting the most out of Motors@Work
	Resources Click to search our expanded help facilities		Warning / Fair Indicates a warning or alert as well as fair asset performance
	Logout Click to log out of Motors@Work		Error / Poor Indicates an error as well as poor asset performance